


Roller Shades with AutoStop Option


1) Fixing Bracket for External Pin.

The roller can be mounted

.....

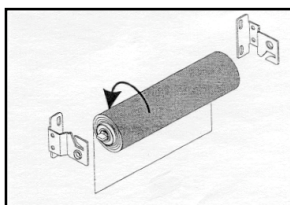


1a – Position of brackets by forward unwinding

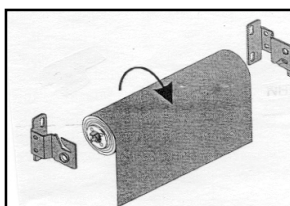


1b – Position of brackets by backward unwinding

2) Mounting of fixing bracket.

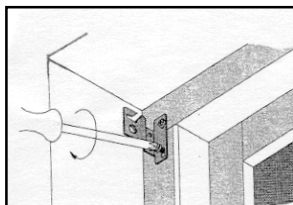


2a – Mounting on a vertical frame (wall)

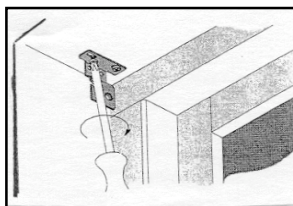


2b – Mounting on a horizontal frame (ceiling)

Mounting of locking pin

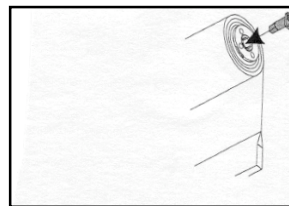


3 – Mount the locking pin in the round hole of the roller blind tube

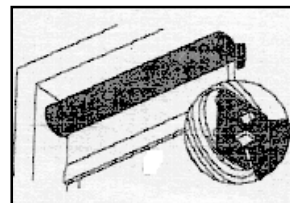


4 – Unwind the blind to the wanted position and mount it in the fixing brackets, first in the right side, next in the left side – The blind must not be kept too tight between the fixing brackets.

5) Tensioning the Spring

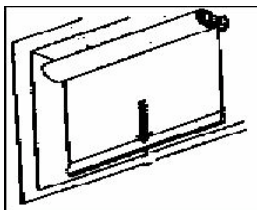


5a – Let the blind roll down and make it lock

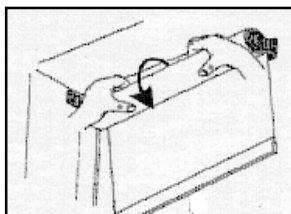

5b – Roll up the blind by hand with the locking pin kept in mesh with the fixing bracket as shown.


5c – Repeat lowering and rolling blind up until it can raise a bit by itself (5a + 5b)

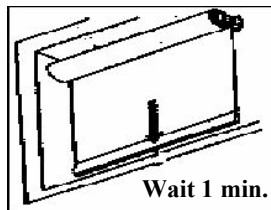

5d – Lower the blind to the bottom frame and make it lock. Wait 1 min. Release the blind. From the position where the blind stops it is rolled up by hand (see figure 5b)- Repeat this until the blind raises to the stop position.

It might be necessary to repeat the tightening of the spring after a while therefore keep this instructions in a safe place

6) Modification of stop position

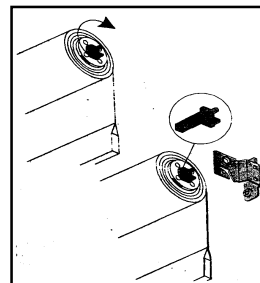

6a – **Lower stop position:** Lower the blind to the wanted stop position. Dismount the blind from the fixing brackets and turn the locking pin clockwise until it is screwed in as far as it will go.


NOTE: If the bracket pin turns the wrong way, it must be taken out of the tube and turned.

Mount the blinds in the fixing brackets again.

See next page




Roller Shades with AutoStop Option

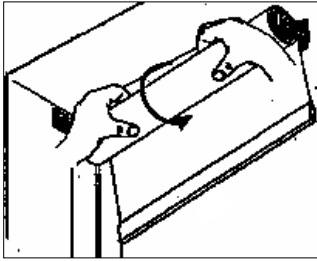

6b – Higher stop position:

If the blind is raised to the stop position it cannot be dismantled. Therefore must be lowered a few centimeters and locked before dismantling.

Dismount the blind from the fixing brackets and roll it up by hand to the new stop position.

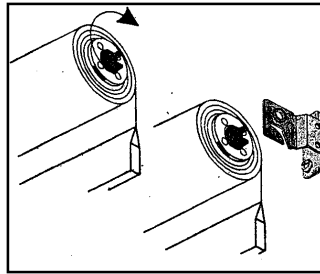


Turn the locking pin clockwise until it is screwed and as far as it will go.

NOTE: If the locking pin turns the wrong way it must be taken out of the tube and turned

Mount the blind in the fixing brackets again

7) Readjustment of Spring

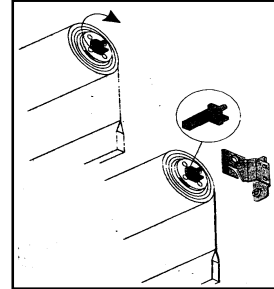

7a – Tighten the Spring:

Lower the blind a little and dismantle it from the left fixing bracket. Roll up the blind by hand (it must be straight) while the blind is kept in mesh with the right bracket (See figure 5b)

7b – Loosen the spring

If the blind is raised to the stop position it must be lowered a few centimeters and locked before dismantling.

Dismount the blind from the left bracket and unroll a little bit by hand. Mount the blind in the left fixing bracket again.

